



Fuse

MON0 DUT MON1
MON0 AUXA MON1

Power

LED EN
VIO13 1.8V 3.3V
1.8V 2.5V 3.3V 5V GND
VDD MON
1V 1.2V 1.35V 2.9V GND
VBUS EN
BOOTMODEb
VBUS Ocb

MGT 0+1

MGT 2+3

UART
RX TX GND

USB

I2C
SCL SDA INTb GND

ETH

D-GPIO

MON1

JTAG

SOC

MON0

SoC A
SoC B

ID
POR
SRST
SOC MON2

PB0 LED0
PB1 LED1

FLASH
MON0 AUXB MON1

FAN

AUXA

DUT up

DUT low

AUXB